 
INSTALLATION INSTRUCTIONS

Remodel Housing - 200 and 300 Series


DO NOT INSTALL IN INSULATION - SUITABLE FOR DAMP LOCATION

RELD200LE1 - RELD200LE2 - RELD300LE1 - RELD300LE2 - RELD200LD1 - RELD200LD2 RELD300LD1 - RELD300LD2 - RELD200LA1 - RELD200LA2 - RELD300LA1 - RELD300LA2



SHUT OFF ELECTRICAL SUPPLY AT SOURCE. 1.

- Bring the electrical wiring to the housing as per applicable local electrical 2 codes.
- 3. Cut the hole to a diameter of: 200 Series: Ø 4 1/4" (108 mm) 300 Series: Ø 3 5/8" (92 mm)
- Remove the junction box cover by pushing on the spring latch (1). 4

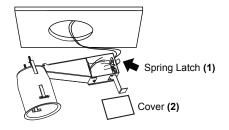

5. Connect the wires based on diagrams below. Close the junction box.

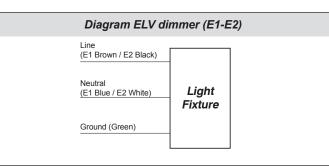


Diagram 0-10V dimmer (D1-D2)			
Line (Black)		+10V Out (Yellow)	
Neutral (White)	Light Fixture	Dim + (Purple)	
Ground (Green)		Dim - (Gray)	
		1	

Diagram 3-wires dimming control (A1-A2)			
Line (Black)	-	Dimmed Hot (Orange)	
Neutral (White)	Light Fixture		
Ground (Green)	-		

Please keep these installation instructions for future maintenance.



CAUTION The use of another company's (non-Contrast) products or components in conjunction with Contrast products may not be covered by UL approvals, and could be hazardous. Such use automatically voids all Contrast warranties and responsibility for any problems that may result from such use.



WARNING SHOCK AND FIRE HAZARD Most dwellings built before 1985 have supply wires rated 60°C. Consult a qualified electrician before installing. Please visit regularly the Website to see the list of compatible dimmers or for more details.


WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional transport for replacement. warranty details. Note: 5 year warranty on driver and LED module.




CONTRAST LIGHTING M. L. INC. 1009 RUE DU PARC-INDUSTRIEL LÉVIS QC G6Z 1C5 CANADA


Tel: 1-888-839-4624 Eax: 1-877-839-7057 info@contrastlighting.com www.contrastlighting.com

© 2015 Contrast Lighting M.L. Inc. All rights reserved EC636 (Rev. B) - 103614 PRINTED IN CANADA 2015-03

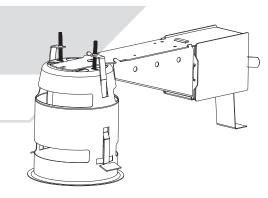


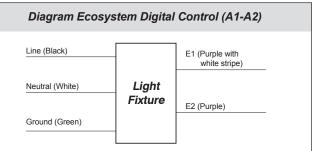

 Insert fixture (2) in the ceiling opening. 6.




7. Push the fastening hooks (3) through the lateral openings and fasten the fixture with the adjustment screws (4).

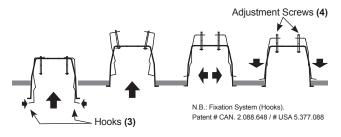

Install the trim. 8

> Connect the male and female connectors.

Push connected wires in the pot then push the trim in the can.

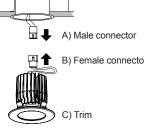

For the adjustable trim (LD2A, LD2B, LD2D, LD2E, LD3A, LD3B), choose aiming angle then tighten screws to lock into position.

