Ardito

2-1/2" Series

Remodel Housing (Optional New Construction Mounting Plate)

REA2V1

 
ATTENTION

Required clearance beyond ceiling level is 5" (127 mm) for flanged trim and 7" (178 mm) for flangeless trim. This measure includes ceiling material.





Section 1 (optional): New Construction Mounting Plate Installation


1. For the flangeless models, remove the exterior knockout (see below).



- Locate position of mounting plate before installing the ceiling material. Fasten
 the mounting plate to the wood joist (or other ceiling type) with the adjustable
 mounting bars (10" (254 mm) to 24-1/2" (622 mm)). To shorten the bars to
 10" (254 mm), remove bars and cut off at the notch (see adjustable mounting
 bars detail view).
- Once the correct bar length is known, press tabs to lock the mounting bars to the plate. Using pliers, tighten the U-shaped hooks on the T-bars (if applicable).

 

 

 


Section 2: Remodel Installation

- 1. SHUT OFF THE ELECTRICAL SUPPLY AT SOURCE.
- 2. CEILING CUTOUT

IMPORTANT: As the side trim is very thin and narrow, the edges of the hole must be clear, precise and without notches so that the trim fits perfectly in the ceiling.

 Note: For square trim, it is strongly recommended to use the cardboard drilling template included with the trim. A reusable steel cutout template is also offered as an option **(TEMP-SQ)**.



Cutting Diameter:


Flanged Round Trim: ø 2-5/8" (67 mm)

 
Flanged Square Trim: 2-5/8" (67 mm) x 2-5/8" (67 mm)

 
Flangeless Round Trim: ø 3-3/16" (81 mm)

 
Flangeless Square Trim: **3-3/16" (81 mm)** x **3-3/16" (81 mm)**

 
- Bring the electrical wiring to the junction box, according to your local electrical code.
- 4. Press on the junction box cover latch (2) to open the junction box cover (1).

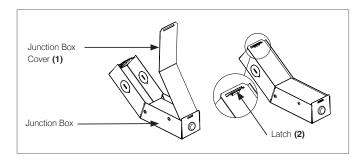









- Close the junction box cover (1) by pressing at the center of the cover. Make sure that it is properly closed.
- Insert the junction box in the ceiling hole and place it on the ceiling or on the new construction plate (optional).
- Junction Box Cover (1)



 $9. \hspace{0.5cm} \hbox{Complete the installation. Refer to the installation sheet of the chosen trim.} \\$





Please keep these installation instructions for future maintenance.

\bigwedge

WARNING

The use of other company's (non-Contrast) products or components (e. g. trims) in conjunction with Contrast Lighting M.L. Inc. products may not be covered by UL approvals and could be hazardous. Such use automatically voids all Contrast Lighting M.L. Inc. warranty and responsibility of these products.



WARNING: RISK OF FIRE

Most dwellings built before 1985 have supply wires rated 60° C. Consult a qualified electrician before installing.

Due to constant evolution of dimmers we must test them regularly. We invite you to frequently visit our Web site to find our dimmer comp

We invite you to frequently visit our Web site to find our dimmer compatibility list: www.contrastlighting.com

WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional warranty details. **Note:** 5-years warranty on driver and LED module.

CONTRASTE

Lévis (Québec) G6Z 1C5 Canada Tel.: 1-888-839-4624 Fax.: 1-877-839-7057

Tel.: 1-888-839-4624 Fax.: 1-877-839-7057 contrastlighting.com info@contrastlighting.com

1009, rue du Parc Industriel

© 2018 Contrast Lighting M.L. Inc. All rights reserved EC669 (Rev. C) 104019