 


LED 6" New Construction Housing

HexaLED

BEFORE INSTALLING:

If spacing between ceiling joists is LESS THAN 12" (30 cm), shorten the mounting bars by cutting each of the mounting bars sections at the cutting marks indicated below.




1. SHUT OFF ELECTRICAL SUPPLY AT SOURCE.




- Slide mounting bars onto the ends of the housing plate, between the metal folded tabs.
- Install the housing plate in the ceiling. Secure the mounting bars on the ceiling.

Joists: Hammer tack point (A) or screw (B) the mounting bar to joists.

Suspended ceiling: Hang the mounting bars on T-bars and using a pliers, tighten the U-shaped hooks.

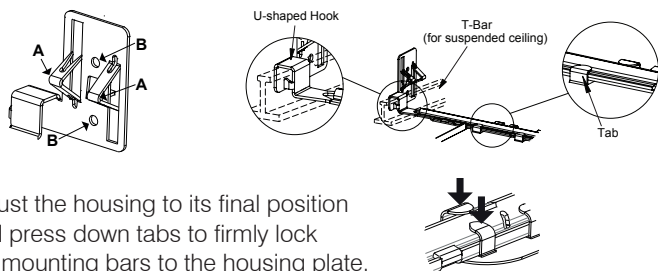


- Adjust the housing to its final position and press down tabs to firmly lock the mounting bars to the housing plate.
- Convey the electrical wiring to the housing in accordance with the requirements of applicable electrical standards.
- Connect the wires based on diagrams below. Please protect unused wires. Close the junction box.

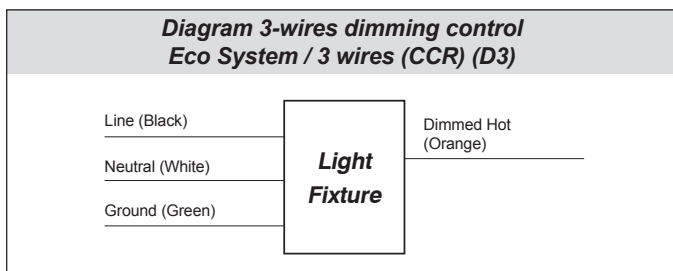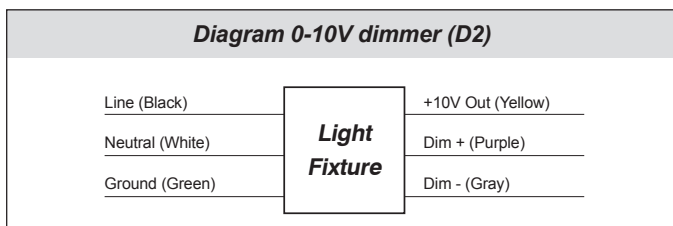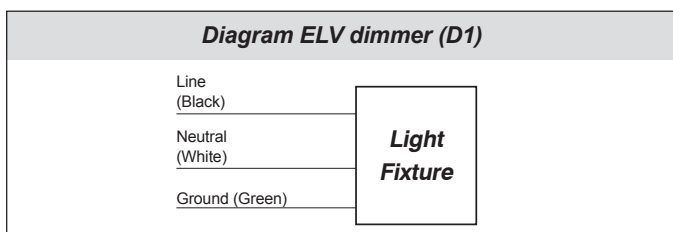


- Install the trim material of your ceiling and make a hole of 6-3/4".

 
- Remove the adjustable center by turning it counterclockwise 1/3 of a turn.



- Unscrew slightly the screws holding the washers located on the heat sink in order to have access to the quick connect terminal.

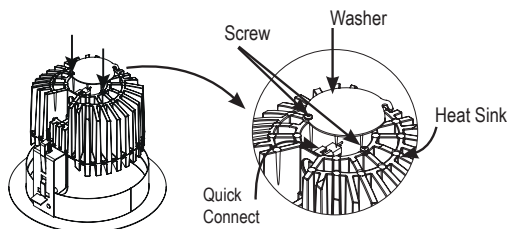


- Insert the connector located at the end of the electrical flexible wire (BX) in the hole provide for this purpose in the heat sink. Connect the quick connect terminal.

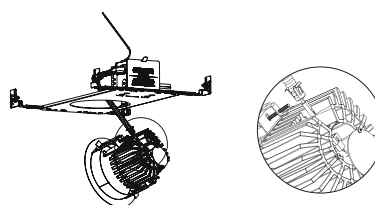


- Replace the washer located on top of the heat sink and tighten the screws (ref. step 9).


- Slide the product in the opening of the ceiling. Then push the hooks out of the housing through the side openings and fix it with the locking screws.

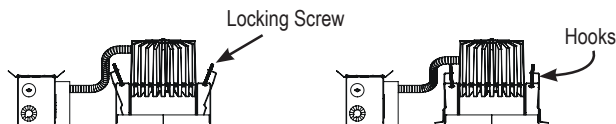

- Aim the mobile part of the trim and block it with the screws provided for this purpose.

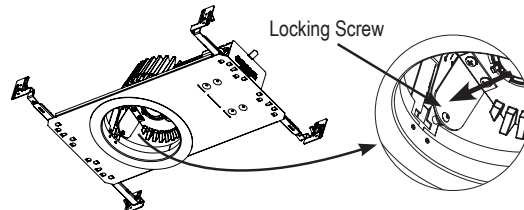

- Reinstall the center of the trim previously removed in step 8 by aligning the reflector opening with the locking tab, in the white plastic connector. Then turn in place clockwise 1/3 of a turn.

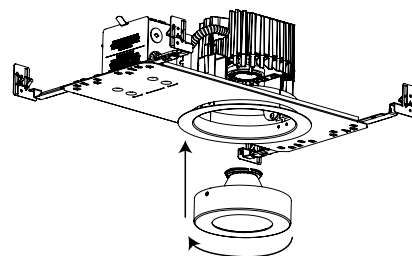

Please keep these instructions for future reference.

Certified cULus for installation in damp locations.



WARNING

The use of other company's (non-Contraste) products or components (e. g. trims) in conjunction with Contrast Lighting M.L. Inc. products may not be covered by UL approvals and could be hazardous. Such use automatically voids all Contrast Lighting M.L. Inc. warranty and responsibility of these products.



WARNING: SHOCK AND FIRE HAZARD

- Consult a qualified electrician before installing.
- NON-IC Housing. All parts of housing must be at least 3" (76 mm) from any insulation materials.

WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional warranty details. Note: 5 year warranty on driver and LED module.